MITEL 5320e IP PHONE



Display

Ring/Message Indicator

Volume, Speaker and Mute Controls

Fixed Function Keys

Dial Pad

Navigation Page Keys

Programmable Feature Keys and Softkeys Transfer/Conference

Handset

Speaker



Mute



Menu



Cancel



Redial







Message

Mitel Mitel

Speaker

NOTE: For more information about using other features and applications on your 5320e IP Phone, refer to 5320e IP Phone User Guide located at www.mitel.com, or contact your Administrator.

Make a Call

Lift the handset OR

Press (1).

5 Dial the number OR

Press a Speed Call key OR

4 Press 123 OR

5 Dial the prefix for external calls (e.g. 9) and the number.

Answer a Call

Lift the handset OR

3 Press (1) , and begin speaking.

End a Call

4 Press 🔊 OR

Replace the handset.

Place a Call on Hold

◆ Press △ . The line key flashes.

Replace the handset if necessary.

Retrieve a Call from Hold

9 Lift the handset OR

3 Press (1).

Press the flashing line key.

Retrieve a Message

4 Press It flashes when a message is

Follow the voice mail prompts to retrieve your

Transfer a Call

4 Press A SQ.

5 Dial the number. Wait for an answer.

9 Hang up OR announce the transfer and then hang up.

Conference a Call

4 Press ~ 100 .

Dial the number. Wait for an answer.

4 Press $\sim \mathfrak{M}$.

Program a Speed Call

4 Press Menu OR

Press **Settings**.

Press Programmable Keys.

Press the key you wish to program.

Press Speed Call.

Press Edit Info and enter the label for the Speed Call.

Press Save.

Press Edit Number and enter the phone

number for the Speed Call.

Press Save, and then press Save again.

Press Close and then press Close again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

3 Press repeatedly to raise the volume OR

repeatedly to lower the volume.

3 Press to mute your microphone.